

# **QUICK USER MANUAL**

#### SETTING THE DATE AND TIME

- Turn the dial to SET CURRENT DATE/TIME
- YEAR: The year will be flashing in the display; Press and to change the year. After setting the correct year
  press to advance the month.
- 3. MONTH: The month will be flashing. Press and to change the month. Press to advance to DAY.
- DAY: The month will be flashing. Press and to change the month. (The date of the week (E.G.: MONDAY) is automatically indicated by the arrow in the display). Press to advance to TIME.
- TIME: The time will be displayed; Press and to select AM, PM or 24hr. Press to select hours. The hours
  will be flashing. Press and to change the hour shown on the display. Press the
  daylight-saying.

Daylinght-saving feature: There will be a flshing. The default will be ON. This automatically changes the time twice a year based on U.S. 2007 daylight-saving parameters. For states not observing daylight-saving time you may turn the feature off by pressing button to OFF. In the event the daylight-saving law changes, you may change the parameters. Please consult owner's manual for further details.

#### SETTING WATERING START TIME

Note: An single watering start time will start the program /A,B, C) and all the stations assigned to the program will run sequentially. Multiple start times can be used to activate multiple daily waterings.

- 1. Turn the dial to the SET WATERING START TIMES position.
- 2. Select program A,B or C by pressing
- Press and to change the start time.
- Press to advance to the next station.
- To eliminate a programmed start time; Press or to set the start time to OFF (which is between 11.45 p.m. and midninght).

## SETTING STATION RUN TIMES

- . Turn the dial to the SET STATION RUN TIMES position.
- 2. Select program A,B or C by pressing
- 3. The display will show the station number and the program letter selected (A,B,C). The run time will be flasing.
- 4. Press and to change the run time.
- 5. Press to advance to the next station.
- Repeat steps 4 and 5 for each station.

#### SETTING DAYS TO WATER

- 1. Turn the dial to the SET DAYS OF WATER position.
- The controller displays currently programmed, active day schedule information. This dial position provides four different water day options: Specific Days of the Week, Interval Watering or Odd & Even Days.

#### SELECTING SPECIFIC DAYS OF THE WEEK TO WATER

- With the arrow cursor on a specific day ( the cursor always starts with Monday), press to activate a particular day of the week to water. Press to cancel watering for that day. After pressing a button the cursor automatically advances to the next day. A indicates a Water Day. A indicates a NO Water Day.
- Repeat step 1 until desired days have been selected. Please reffers to OWNERS MANUAL for interval and Odd/Even day scheduling.

#### **AUTOMATIC OPERATION**

After programming, set the dial to RUN to enable automatic operation of all scheduled waterings.

#### **RAIN SENSOR BYPASS SWITCH**

If a sensor is preventing system operation (or no sensor is installed and the swich is in the ACTIVE position), SENSOR OFF will be displayed. Move the switch to the BYPASS and the rain sensor will be bypassed.

#### SYSTEM OFF

Turn the dial to SYSTEM OFF position. This shuts down all programmed waterings indefinely until the dial is turned back to the RUN position. This can also be used for cancel waterings in progress.

#### MANUALLY OPERATING A SINGLE STATION

- 1. Turn the dial to the MANUAL SINGLE STATION position.
- Station run time will flash in the display. Press to move to the desired station. Press and to change the amount of time for the valve to water.
- Turn the dial to the RUN position to run the station. (Designated station will water, then controller will return to automatic mode).

### ONE-TOUCH MANUAL START AND STATION ADVANCE

- 1. With the dial in RUN position, press and hold until station 1 appears in the display.
- 2. Press or to select the amount of time.
- 3. Press to advance stations. After a short pause the controller will began watering.
- To cancel, turn dial to OFF position until display reads OFF, then turn dial back to RUN to return to automatic mode.